



# User Manual

Code: ASI1212F  
ACCESS CONTROLLER **ASI1212F** DAHUA

## Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order. If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
2. Improper results of operation of the product or products related with it;
3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

### Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

The device was designed in such a way that it restarts operation when power supply is restored after a break.

**Attention! We recommend using protections to further protect the device from possible overvoltages in installations. Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the voltages higher than specified in manual, are not under warranty.**

Turn off the device before transporting it.

Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

### Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources.

To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally-friendly way.

The ASI1212F controller can operate autonomously or in the network mode. The device enables single door or read in/out access control. In case of read in/out access control the controller must be connected to the external access reader of the ASR series or to the reader equipped with the Wiegand interface.



Cards support:	13.56 MHz S50
Reading distance of prox-keys:	1 ... 3 cm
Keyboard built-in:	—
Autonomous operation:	✓
Battery backup support:	—
Input lines:	3
Output lines:	3
Identification time:	< 1.5 s
Communication:	<ul style="list-style-type: none"> <li>• RS-485</li> <li>• Wiegand</li> <li>• LAN</li> </ul>
RS-485 interface:	✓
RS-232 interface:	—
Wiegand interface:	✓
Network interface:	10/100 Base-T
Default IP address:	192.168.1.108
Default admin user / password:	admin / - The administrator password should be set at the first start
USB:	—



# User Manual

Code: ASI1212F  
ACCESS CONTROLLER **ASI1212F** DAHUA

Memory card slot:	—
Internal memory:	Support storage of 150 000 records
Power supply:	12 V DC / 1 A
Main features:	<ul style="list-style-type: none"><li>• Built-in LCD display 240 x 320 px - 2.8 " capacitive touch screen</li><li>• Fingerprint reader built-in</li><li>• Memory of 3000 fingerprint patterns</li><li>• Possible connection of the external ASR series reader (read in/out door control)</li><li>• Identification modes : Proximity identifier 13.56 MHz S50, Fingerprint, PIN, Any combination of the above</li><li>• Remote access verification</li><li>• Tamper detection - removing from mounting surface</li><li>• Support for door contact and exit button</li><li>• Indication of forced entry and the lack of closing doors</li><li>• 30000 indexed users</li><li>• Possibility to configure access groups</li><li>• 128 General Purpose Schedules</li><li>• 128 time periods within single Schedule</li><li>• Holiday Schedules</li><li>• Anti-passback</li><li>• Integration with an alarm system via in/out line</li><li>• Remote programming from PC</li></ul>
"Index of Protection":	—
Operation temp:	-10 °C ... 45 °C
Permissible relative humidity:	5 ... 90 % (non-condensing)
Dimensions:	115 x 115 x 32 mm
Weight:	0.22 kg
Supported languages:	English
Manufacturer / Brand:	DAHUA
Guarantee:	<b>3 years</b>

Front panel:




Rear view:



Connectors:




Example of application:

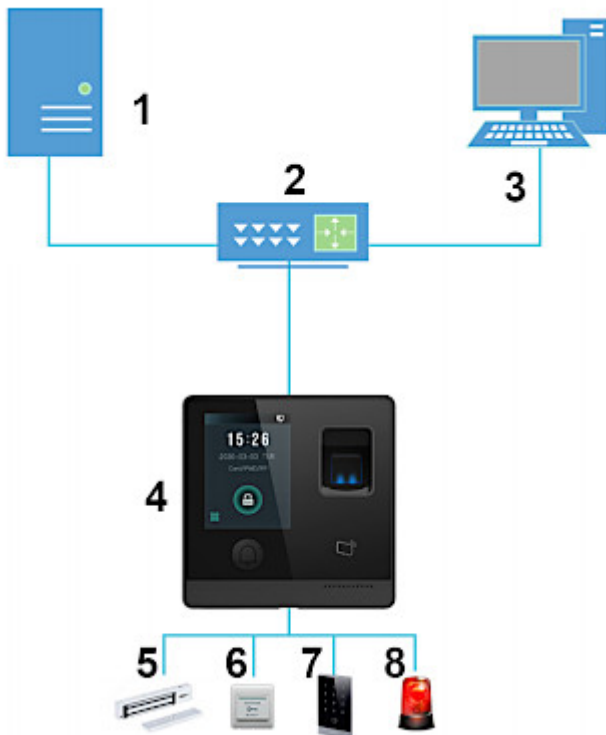

1. System management center
2. Switch
3. Remote client
4. ASI1212F

- 5. Electromagnetic lock
- 6. Door/gate opening button
- 7. Reader with keypad
- 8. Signaling device

In the kit:

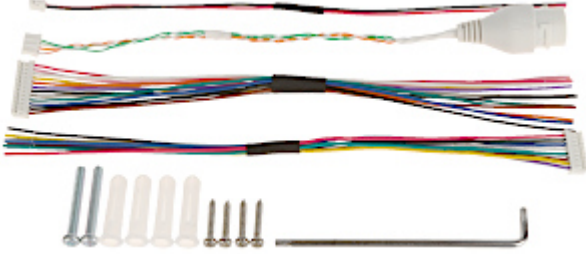

## PACKAGE

Dimensions (L x W x H): 0x0x0 mm	Gross Weight: 0 kg
----------------------------------	--------------------