

Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order.

If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity;
2. Improper results of operation of the product or products related with it;
3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

The device was designed in such a way that it restarts operation when power supply is restored after a break.

Attention! We recommend using protections to further protect the device from possible overvoltages in installations. Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the voltages higher than specified in manual, are not under warranty.

Turn off the device before transporting it.

Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources.

To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally-friendly way.

Megapixel camera with 1/4" OmniVision OV9712 CMOS sensor and AHD (Analog High Definition) / PAL.
The AHD interface allows to transmission of analog video signal via coaxial cable in 720p resolution. It enables the transmission of HD resolution images for even 500 m distance with keeping the low costs of the installation. During transmission there are no delays and is maintained the original, high quality image.
Additionally camera has a possibility to select output signal standard between AHD and PAL. The change of the AHD / PAL standard is done with joystick by holding it tilted to the right or to the left for approx. 5 seconds, without going into the OSD.





User Manual

Code: AHD-LC4-2812W

AHD, PAL CAMERA **AHD-LC4-2812W** - 720p 2.8 ... 12 mm

Standard:	AHD / PAL
Sensor:	1/4 " OmniVision OV9712 CMOS
Digital Image Processor:	Nextchip NVP2431H
Matrix size:	1.0 Mpx
Resolution:	1280 x 720 - 720p AHD-M , 960 x 576 - 960H PAL
Range of IR illumination:	40 m
IR illuminator power adjustment:	Automatic
Lens:	2.8 ... 12 mm, 2 Mpx
View angle:	<ul style="list-style-type: none">• 66 ° ... 17 ° (manufacturer data)• 61 ° ... 18 ° (our tests result)
S/N ratio:	> 58 dB
Video output:	1 Vpp 75 Ω, AHD / PAL - selectable by switch
Main features:	<ul style="list-style-type: none">• ICR - Movable InfraRed filter• Sense-UP - (Slow Shutter) - Increase the sensor sensitivity max. x 30• D-WDR - Wide Dynamic Range• DNR - Digital Noise Reduction• F-DNR (Defog) - Reduction of image noise caused by precipitation• Motion Detection - max. 4 zones• Privacy zones - max. 4• BLC - configurable Back Light Compensation• HSBLC - High Light Compensation (spot)• Mirror - Mirror image• image "freeze"• Sharpness - sharper image outlines• Monitor type correction - LCD/CRT
OSD menu:	✓
"Index of Protection":	IP66
Power supply:	12 V DC / 420 mA
Housing:	Compact, Metal
Color:	White
Operation temp:	-20 °C ... 60 °C
Weight:	0.950 kg
Dimensions:	295 x 112 x 105 mm
Supported languages:	English, Chinese, French, Spanish, Dutch, German, Polish, Portuguese, Russian, Turkish, Italian
Guarantee:	2 years

Front view:




Side view:




Bottom view:



Mounting side view:

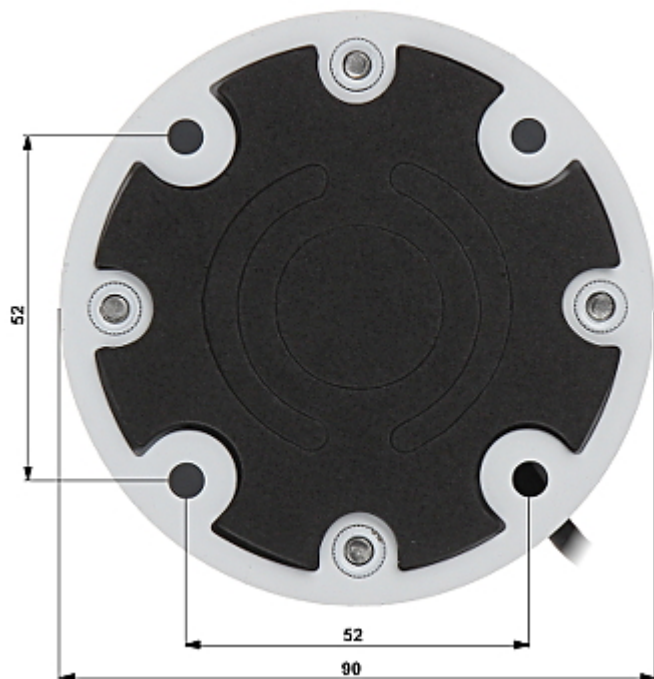

The appropriate signal format selection is done by tilting and holding the joystick for 5 s without entering to the OSD menu. Changing the signal to the NTSC in the camera causes loss of image in connected AHD recorder:

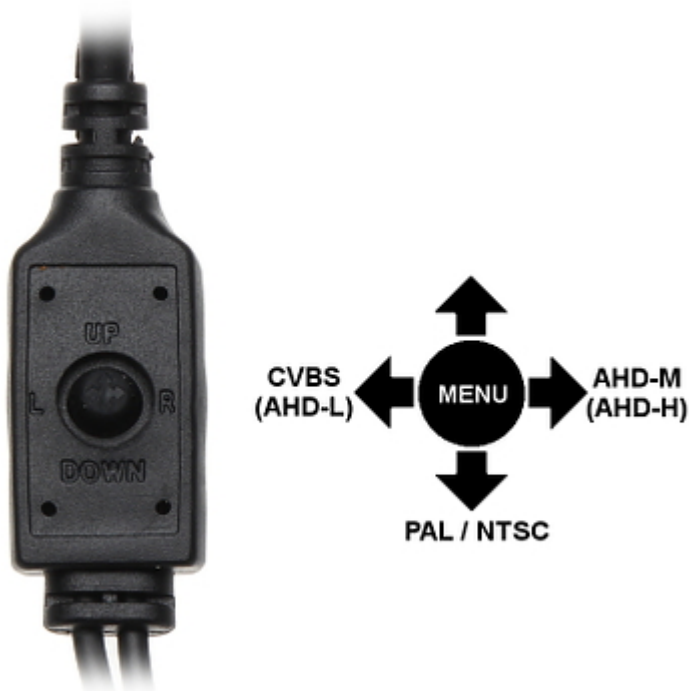


Configuration

- 1) Turn on the power
- 2) Move the joystick left or right, setting the appropriate resolution
- 3) Move the joystick down by 5 s, setting the PAL / NTSC

The PAL and NTSC standard is set regardless of the resolution.

In the kit:

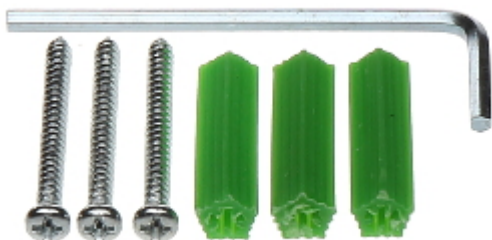

PACKAGE

Dimensions (L x W x H): 0x0x0 mm	Gross Weight: 0 kg
----------------------------------	--------------------