

Warning!

Please read the user manual included in this work as it contains important information related with safety of installation and use of the device.

Only persons who read the user manual may use the device.

The user manual must be kept because it may be required in the future. The device is to be used exclusively for purposes specified in this user manual.

The device must be unpacked prior to starting-up. After removing the packaging make sure the device is in working order. If the product has defects, it should not be used until it is repaired.

The product is intended for use at home and commercial use and may not be used for other than intended use.

The manufacturer is not liable for damages resulting from not adhering to the rules contained in the user manual, therefore, we recommend to follow the aforementioned safety rules for operation and maintenance of the device. In this way you will ensure yourself safety and avoid causing damage to the device.

The manufacturer and the supplier are not liable for losses or damages arising out of the product, including financial or intangible losses, loss of profits, income, data, pleasure from use of the product or other products related with it - indirect, incidental or consequential loss or damage. The above provisions apply whether the loss or damage concerns:

1. Deterioration of quality or the lack of operation of the products or products related with it due to damage as well as the lack of access to the product when it is undergoing repair, which results in stoppage the loss of user's time or a break in business activity; 2. Improper results of operation of the product or products related with it;

3. It applies to losses and damages according to any legal category, including negligence and other losses, termination of a contract, expressed or implied guarantee and strict liability (even if the manufacturer or the supplier was notified about the possibility of occurrence of such damages).

Safety measures:

Particular attention at designing was directed to quality standards of the device where ensuring safety of operation is the most important factor.

The device must be secured against contact with caustic, staining and viscous fluids.

The device was designed in such a way that it restarts operation when power supply is restored after a break. Turn off the device before transporting it.

Prior to connecting the device to a power source check whether the supplied voltage is consistent with rated voltage specified in the user manual.

Attention! We recommend using protections to further protect the device from possible overvoltages in installations. Surge protectors are effective protection against accidental pass to the device voltages higher than the rated. Damages caused by pass the voltages higher than specified in manual, are not under warranty.

Proper product disposal:

A marking of a crossed out waste bin indicates that the product may not be disposed together with other household waste in the entire EU. To avoid possible damage to the natural environment of health due to uncontrolled waste disposal, therefore, it should be handed over for recycling, propagating in this way sustainable use of natural resources.

To return a worn-out product, use a collection and disposal system of this type of equipment or contact a seller from whom it was purchased. He will then be recycled in an environmentally-friendly way.

It is forbidden to use the device in case its power cord or plug is damaged, the device works incorrectly, was damaged or dropped. A damaged power cord or plug must be replaced with new ones by the manufacturer, personnel of service centre or a person with relevant qualifications in order to avoid the risk of electric shock. We do not recommend repairing the device on one's own for safety reasons.

The device is not intended for operation by persons (including children) with limited physical, sensory or mental capabilities as well as persons inexperienced in operation or not competent to operate of such device, unless the operation is supervised by a person responsible for their safety or in line with instructions for use provided by such person.

It is forbidden to touch the plug with wet hands! Pull the plug, never the cable, to pull out the plug from a socket.

The device is to be used exclusively according to its use described in this manual. Use of accessories not recommended by the manufacturer of the device may cause fire, electric shock or injuries.

Marking of a lightning inside a equilateral triangle signifies presence of dangerous voltage, contained under the cover of the device. It may be dangerous for user's life and health.







The ASC1204C-D controller is intended to use in access control systems based on electrical control of door opening.

Number of served transitions:	4 (two-way)
Support:	DAHUA
Number of supported readers:	8 pcs
Battery backup support:	max. 7 Ah
Input lines:	20 pcs
Output lines:	12 pcs - Relay
Communication:	• RS-485, • Ethernet, • Wiegand 34/26
Power supply:	85 264 V AC
Main features:	 Support for 4 doors (20 inputs: 4x lock state, 4x door sensor, 4x exit button, 8x alarm line) 100000 indexed users History of 150000 events 128 General Purpose Schedules Function to prevent of multiple use of the same code/card to gain access (antipassback) Door Left Open and Door Forced Open alarms Tamper detection - opening the enclosure Watchdog built-in Remote programming from PC Metal housing



DELTA-OPTI Monika Matysiak; https://www.delta.poznan.pl POL; 60-713 Poznań; Graniczna 10 e-mail: delta-opti@delta.poznan.pl; tel: +(48) 61 864 69 60



User Manual Code: ASC1204C-D ACCESS CONTROLLER ASC1204C-D DAHUA

Operation temp:	-30 °C 60 °C
Permissible relative humidity:	max. 95 % (non-condensing)
Weight:	2.63 kg
Dimensions:	280 x 320 x 115 mm
Manufacturer / Brand:	DAHUA
Guarantee:	3 years

Front view:



Internal view of the housing:





DELTA-OPTI Monika Matysiak; https://www.delta.poznan.pl POL; 60-713 Poznań; Graniczna 10 e-mail: delta-opti@delta.poznan.pl; tel: +(48) 61 864 69 60

2024-04-26

ASC1204C-D



Bottom view:



Side view:



Mounting side view:



DELTA-OPTI Monika Matysiak; https://www.delta.poznan.pl POL; 60-713 Poznań; Graniczna 10 e-mail: delta-opti@delta.poznan.pl; tel: +(48) 61 864 69 60

2024-04-26

ASC1204C-D






Dimensions:





90,00

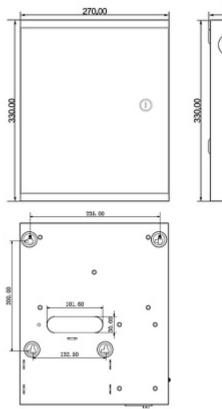

In the kit:



PACKAGE

Dimensions (L x W x H): 0x0x0 mm Gross Weight: 0 kg



DELTA-OPTI Monika Matysiak; https://www.delta.poznan.pl POL; 60-713 Poznań; Graniczna 10 e-mail: delta-opti@delta.poznan.pl; tel: +(48) 61 864 69 60

2024-04-26

ASC1204C-D